

Printer
ACTIVE WEAR



MEASUREMENT LIST

Brand: PRINTER ACTIVE WEAR

Style: 2261067 Hiker

	S	M	L	XL	XXL	3XL	4XL	5XL
body length CB	74	77	80	83	86	89	92	95
1/2 chest	54	58	62	66	70	74	78	82
Sleevelenght	69	70	71	72	73	73,5	74	74,5

All measurements are indicative with minimum tolerance of 1 cm